


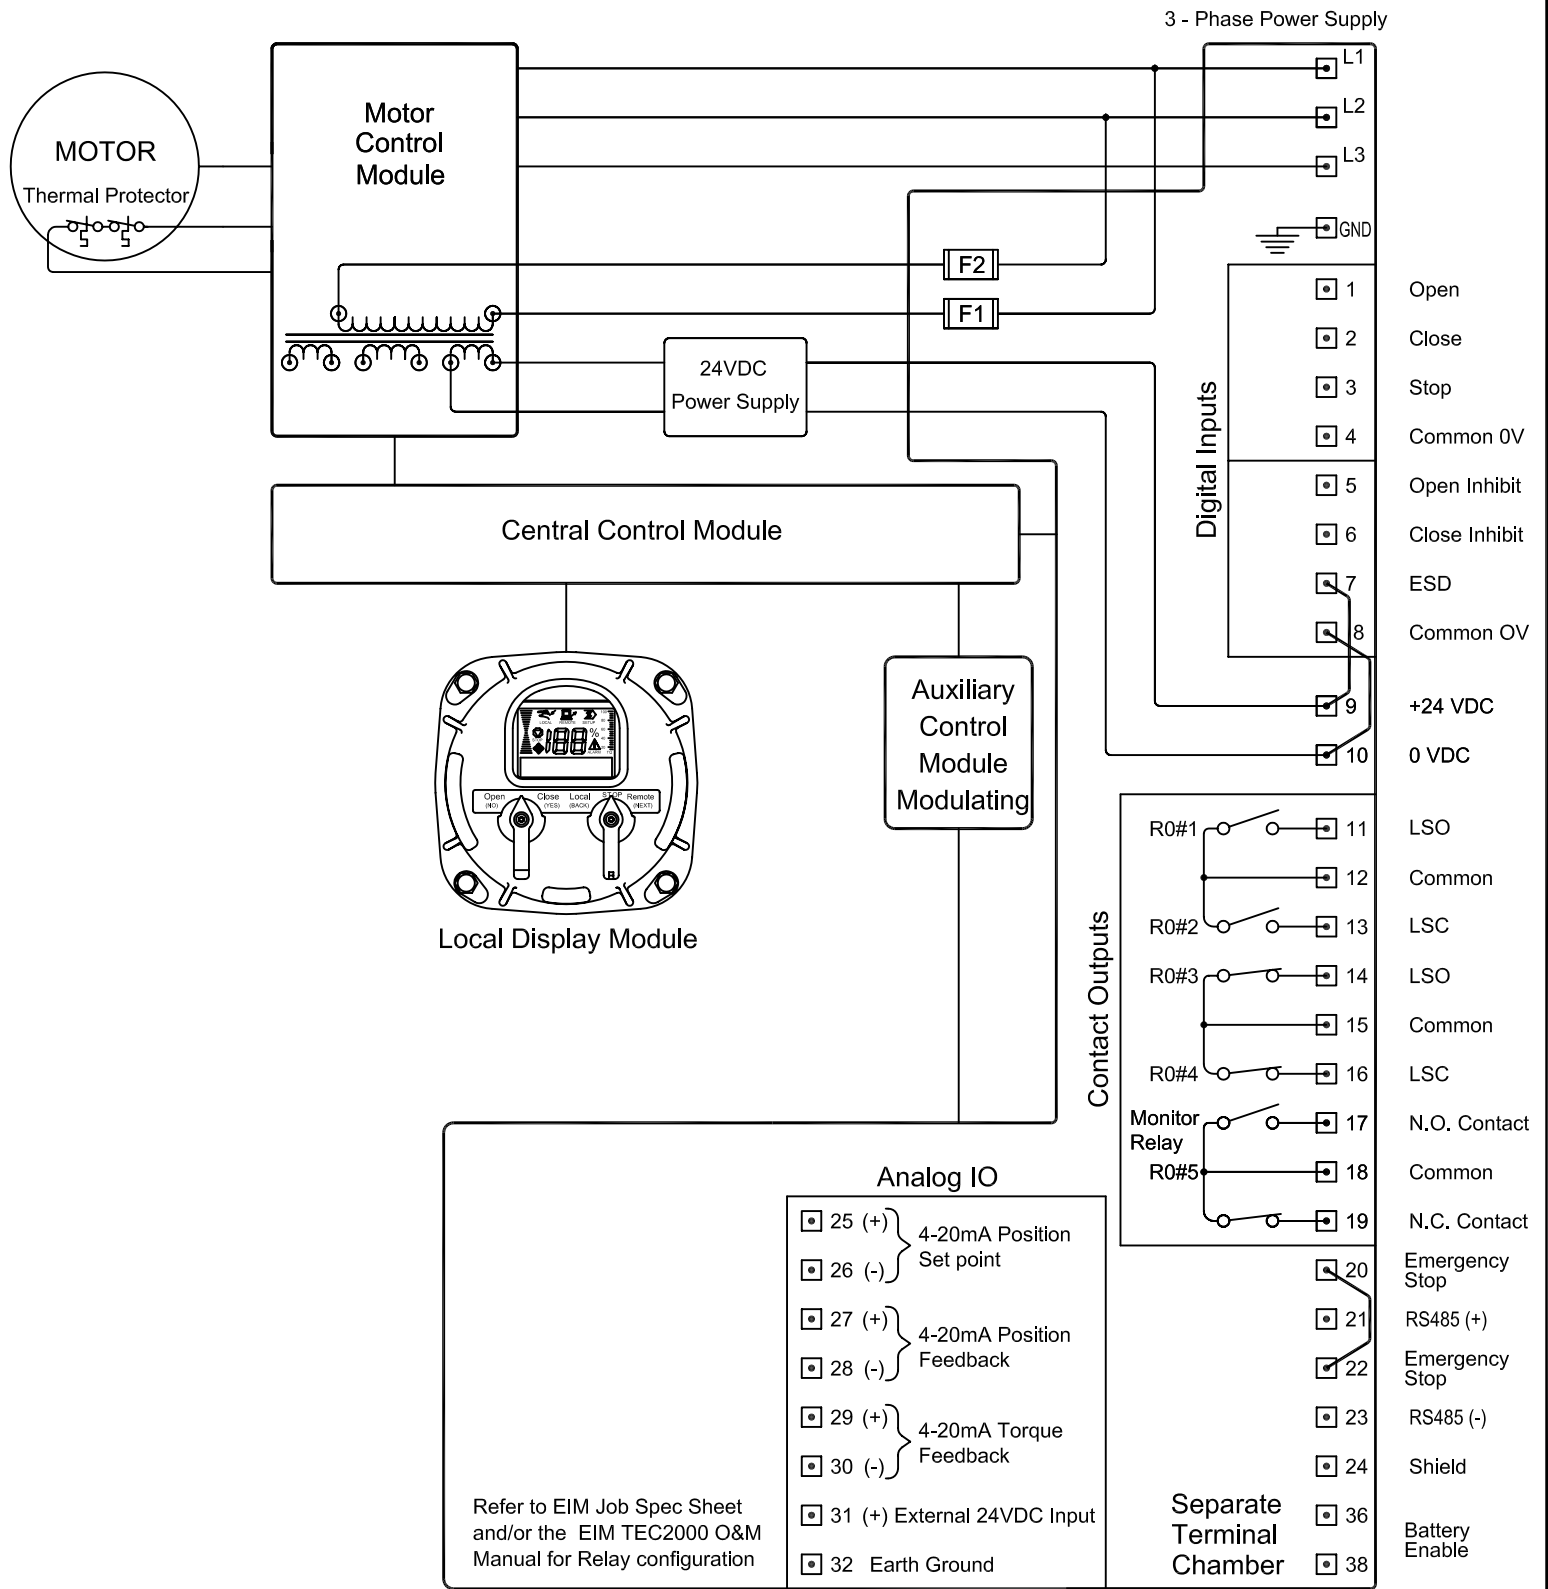

ACM	ARM	CBM	CCM	DBM	LDM	MCM	RDM	STC
02	00	00	01	00	01	02	00	01

Output Switch Contact Development			
Valve Position			Contact Function
Close	MID	Open	
LSO			Open Limit
LSC			Close Limit
LSA			Open Limit
LSB			Close Limit

EIM CONTROLS	
13840 PIKE ROAD	
MISSOURI CITY, TEXAS	
WWW.EIM-CO.COM	
CONTROL	DATE
DG	7/01/2005

WIRING DIAGRAM **TEC-3102-0000**

- NOTES: 1) All digital inputs have an input voltage range of 18-150 VDC or 20-250 VAC.
 2) All digital relay outputs are rated for 5A @ 30 VDC or 5A @ 250 VAC Resistive, 2A Inductive load.
 3) Jumpers shown connected between terminals are permissible but not required.
 4) Emergency stop requires jumper or normally closed contact (actuator stops when contact open).
 5) Remote display communication port is RS-485.
 6) If bare wires (without terminals) are connected, remove a maximum of .25 inch insulation.
 7) User replaceable primary fuses (F1 and F2) are located in the Terminal Chamber Enclosure. All transformer secondary fuses are automatic resetting.
 8) Contact Outputs and Output Switch Contact Development Chart shown for default configuration only. User may redefine all Outputs (See TEC2000 Installation & Operation Manual E2K-405-0703).