

CIRCUIT DRAWN WITH
POWER SUPPLY OFF

FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT

RWS302

TRANSFORMER TAPPING OPTIONS

TYPE 1

TAP	NOM	RANGE
X	100	80-120
Y	110	88-132
Z	120	96-144
FS1-250mA A/S FS2-5A A/S		

TYPE 2

TAP	NOM	RANGE
X	200	160-240
Y	230	184-276
Z	270	216-324
FS1-150mA A/S FS2-2.5A A/S		

TYPE 3


TAP	NOM	RANGE
X	380	304-456
Y	400	320-480
Z	415	332-498
FS1-100mA A/S FS2-1.5A A/S		

TYPE 4

TAP	NOM	RANGE
X	480	384-576
Y	575	460-690
Z	690	552-828
FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1, 2, 3 & 4 -
FUSE FS3 - 20A ATO FAST ACTING

TYPE 5 24VDC

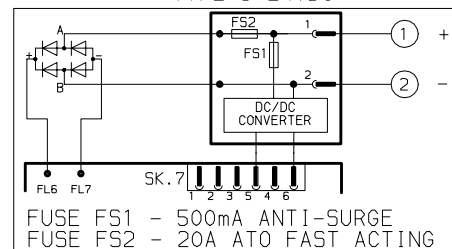

ALL TRANSFORMER TYPES -
PS1 SELF-RESETTING FUSE

NOTE

REFER TO PUBLICATION E175E FOR
APPROVED FUSES FS1, FS2 AND FS3.

MAX EXTERNAL LOAD ON TERMINALS
4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES
TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION
TO BE 300mS.


CURRENT DRAWN FROM EACH REMOTE
CONTROL SIGNAL IS 5mA ON 24V DC
OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END
BY TERMINAL No. OR TAG No.

ANALOGUE INPUT SIGNAL FOR FOLOMATIC

FOR MANUAL/AUTO CONNECTIONS AND
DETAILS OF FOLOMATIC/CPT FUNCTIONS
REFER TO ROTORK PUBLICATION E120E
FOR NORMAL FOLOMATIC CONTROL LINK
TERMINAL 39 TO TERMINAL 5, AND
TERMINAL 41 TO TERMINAL 4.

INDICATION CONTACTS S1-S4 ARE SHOWN
IN THEIR DEFAULT CONFIGURATION.
CONTACTS MAY BE CONFIGURED FOR ANY
OF THE FUNCTIONS DESCRIBED IN E175E

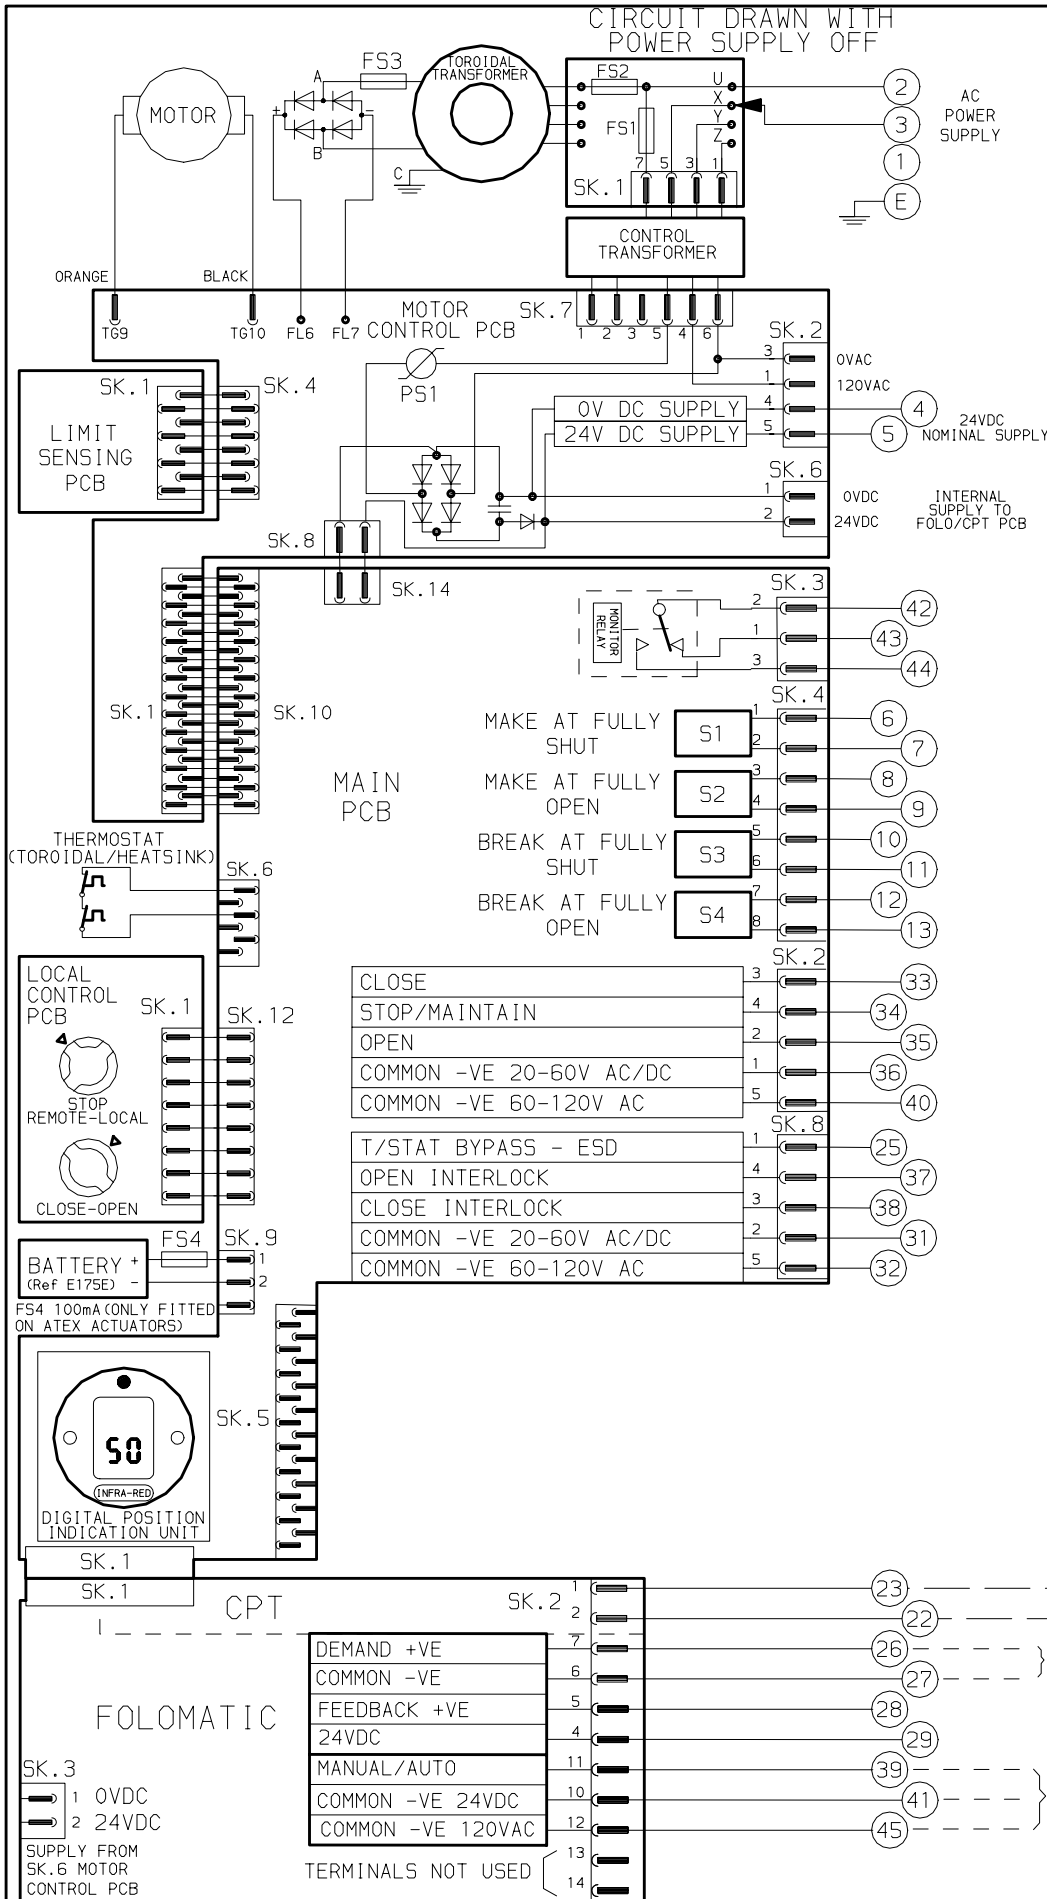

No	DATE	REVISION DETAILS	www.rotork.com		CONFIG BY PJW	IQT + FOLOMATIC & CPT	
02	090903	MTR CONNECTION NOTE REMOVED P.J.W CHECKED T.H	ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-328-1550	DATE 010803 CHECKED TH BASE WD 6010-100 JOB No - M.I.No -	CIRCUIT DIAGRAM No -REV 6010-100-02	
						B1 C1 B2 C2	